


Side Extension Kit

0.35 yd³ & 0.7 yd³ Stainless Steel Hopper Spreaders

PARTS LIST

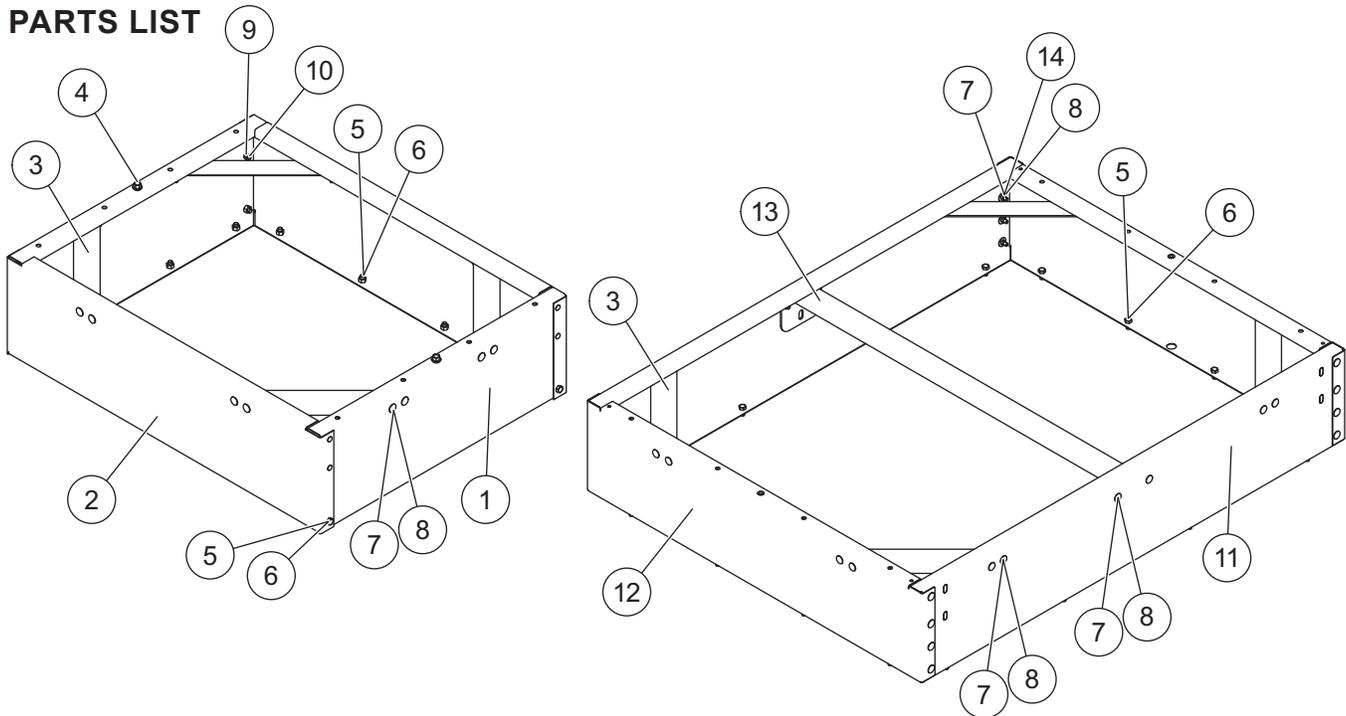

| 85698 Side Extension Kit – 0.35 yd ³ Spreader | | | | | | | |
|--|-------|-----------|--|------|-------|----------------------|--|
| Item | Part | Qty | Description | Item | Part | Qty | Description |
| 1 | 96670 | 2 | End Extension – 0.35 yd ³ Spreader | 3 | 96630 | 4 | Corner Brace |
| 2 | 96675 | 2 | Side Extension – 0.35 yd ³ Spreader | ns | 92065 | 1 | Bolt Bag – 0.35 yd ³ Spreader |
| 92065 Bolt Bag – 0.35 yd ³ Spreader | | | | | | | |
| 4 | | 2 | 3/8-16 x 1 Serrated Flange Hex Cap Screw SS | 7 | | 16 | 5/16-18 x 3/4 Carriage Bolt |
| 5 | | 20 | 3/8-16 x 3/4 Hex Cap Screw SS | 8 | | 16 | 5/16-18 Hex Locknut GB SS |
| 6 | | 20 | 3/8-16 Hex Locknut GB SS | 9 | | 8 | 1/4-20 x 3/4 Carriage Bolt |
| | | | | 10 | | 8 | 1/4-20 Hex Locknut GB SS |
| 85699 Side Extension Kit – 0.7 yd ³ Spreader | | | | | | | |
| 3 | 96630 | 4 | Corner Brace | 13 | 74787 | 1 | Cross Beam |
| 11 | 96640 | 2 | End Extension – 0.7 yd ³ Spreader | ns | 96650 | 1 | Bolt Bag – 0.7 yd ³ Spreader |
| 12 | 96635 | 2 | Side Extension – 0.7 yd ³ Spreader | | | | |
| 96650 Bolt Bag – 0.7 yd ³ Spreader | | | | | | | |
| 4 | | 2 | 3/8-16 x 1 Serrated Flange Hex Cap Screw SS | 7 | | 36 | 5/16-18 x 3/4 Carriage Bolt |
| 5 | | 16 | 3/8-16 x 3/4 Hex Cap Screw SS | 8 | | 36 | 5/16-18 Hex Locknut GB SS |
| 6 | | 16 | 3/8-16 Hex Locknut GB SS | 14 | | 16 | 3/8 Flat Washer SS Type A Wide |
| ns = not shown | | G = Grade | | | | SS = Stainless Steel | |

INSTALLATION INSTRUCTIONS

⚠ WARNING

Do not exceed GVWR or GAWR ratings as found on the driver-side vehicle door cornerpost.

⚠ CAUTION

Read this document before installing the side extension kit.

⚠ CAUTION


Use standard methods and practices when attaching spreader and installing accessories, including proper personal protective safety equipment.

NOTE: Apply anti-seize lubricant to all hardware to prevent galling.

1. Park the vehicle on a smooth, level, hard surface, such as concrete. Turn the vehicle ignition OFF and remove the key.
2. Remove the top screen brackets and the top screen. Set the brackets and screen aside for later use.
3. **For 0.35 yd³ spreaders:** Fasten the two side extensions and two end extensions together to create a box, using eight 1/4" x 3/4" carriage bolts and eight 1/4" locknuts, and four 3/8" x 3/4" cap screws and four 3/8" locknuts. Leave fasteners loose.

For 0.7 yd³ spreaders: Fasten the two side extensions and two end extensions together to create a box, using sixteen 5/16" x 3/4" carriage bolts, sixteen 5/16" washers, and sixteen 5/16" locknuts. Leave fasteners loose.
4. Install the four corner braces using sixteen 5/16" x 3/4" carriage bolts and sixteen 5/16" locknuts. Leave fasteners loose.

5. Install the assembled side extensions box on the top of the hopper, making sure that the holes on the bottom of the extensions match the holes on the top of the hopper assembly.
6. Install the extensions to the top of the hopper using sixteen 3/8" x 3/4" cap screws and sixteen 3/8" locknuts. Tighten all fasteners.

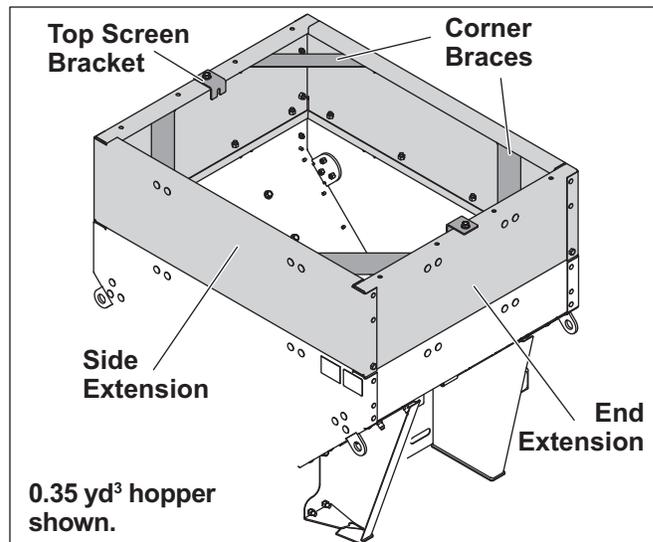

For 0.7 yd³ spreaders: Install the cross beam using four 5/16" x 3/4" carriage bolts and 5/16" nuts.

7. **For 0.35 yd³ spreaders:** Reinstall the top screen and top screen brackets into the rivnuts on the top of the driver-side and passenger-side extension panels using two 3/8" x 1" serrated flange cap screws.

For 0.7 yd³ spreaders: Reinstall the top screen and top screen brackets into the rivnuts on the top of the front and rear hopper end caps using two 3/8" x 1" serrated flange cap screws.

Copyright © 2020 Douglas Dynamics, LLC. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film, or other distribution and storage media, without the written consent of the company. Authorization to photocopy items for internal or personal use by the company's outlets or spreader owner is granted.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for spreaders. Do not exceed vehicle ratings with a spreader. The company offers a limited warranty for all spreaders and accessories. See separately printed page for this important information.